



Foundation Masonry Overviews

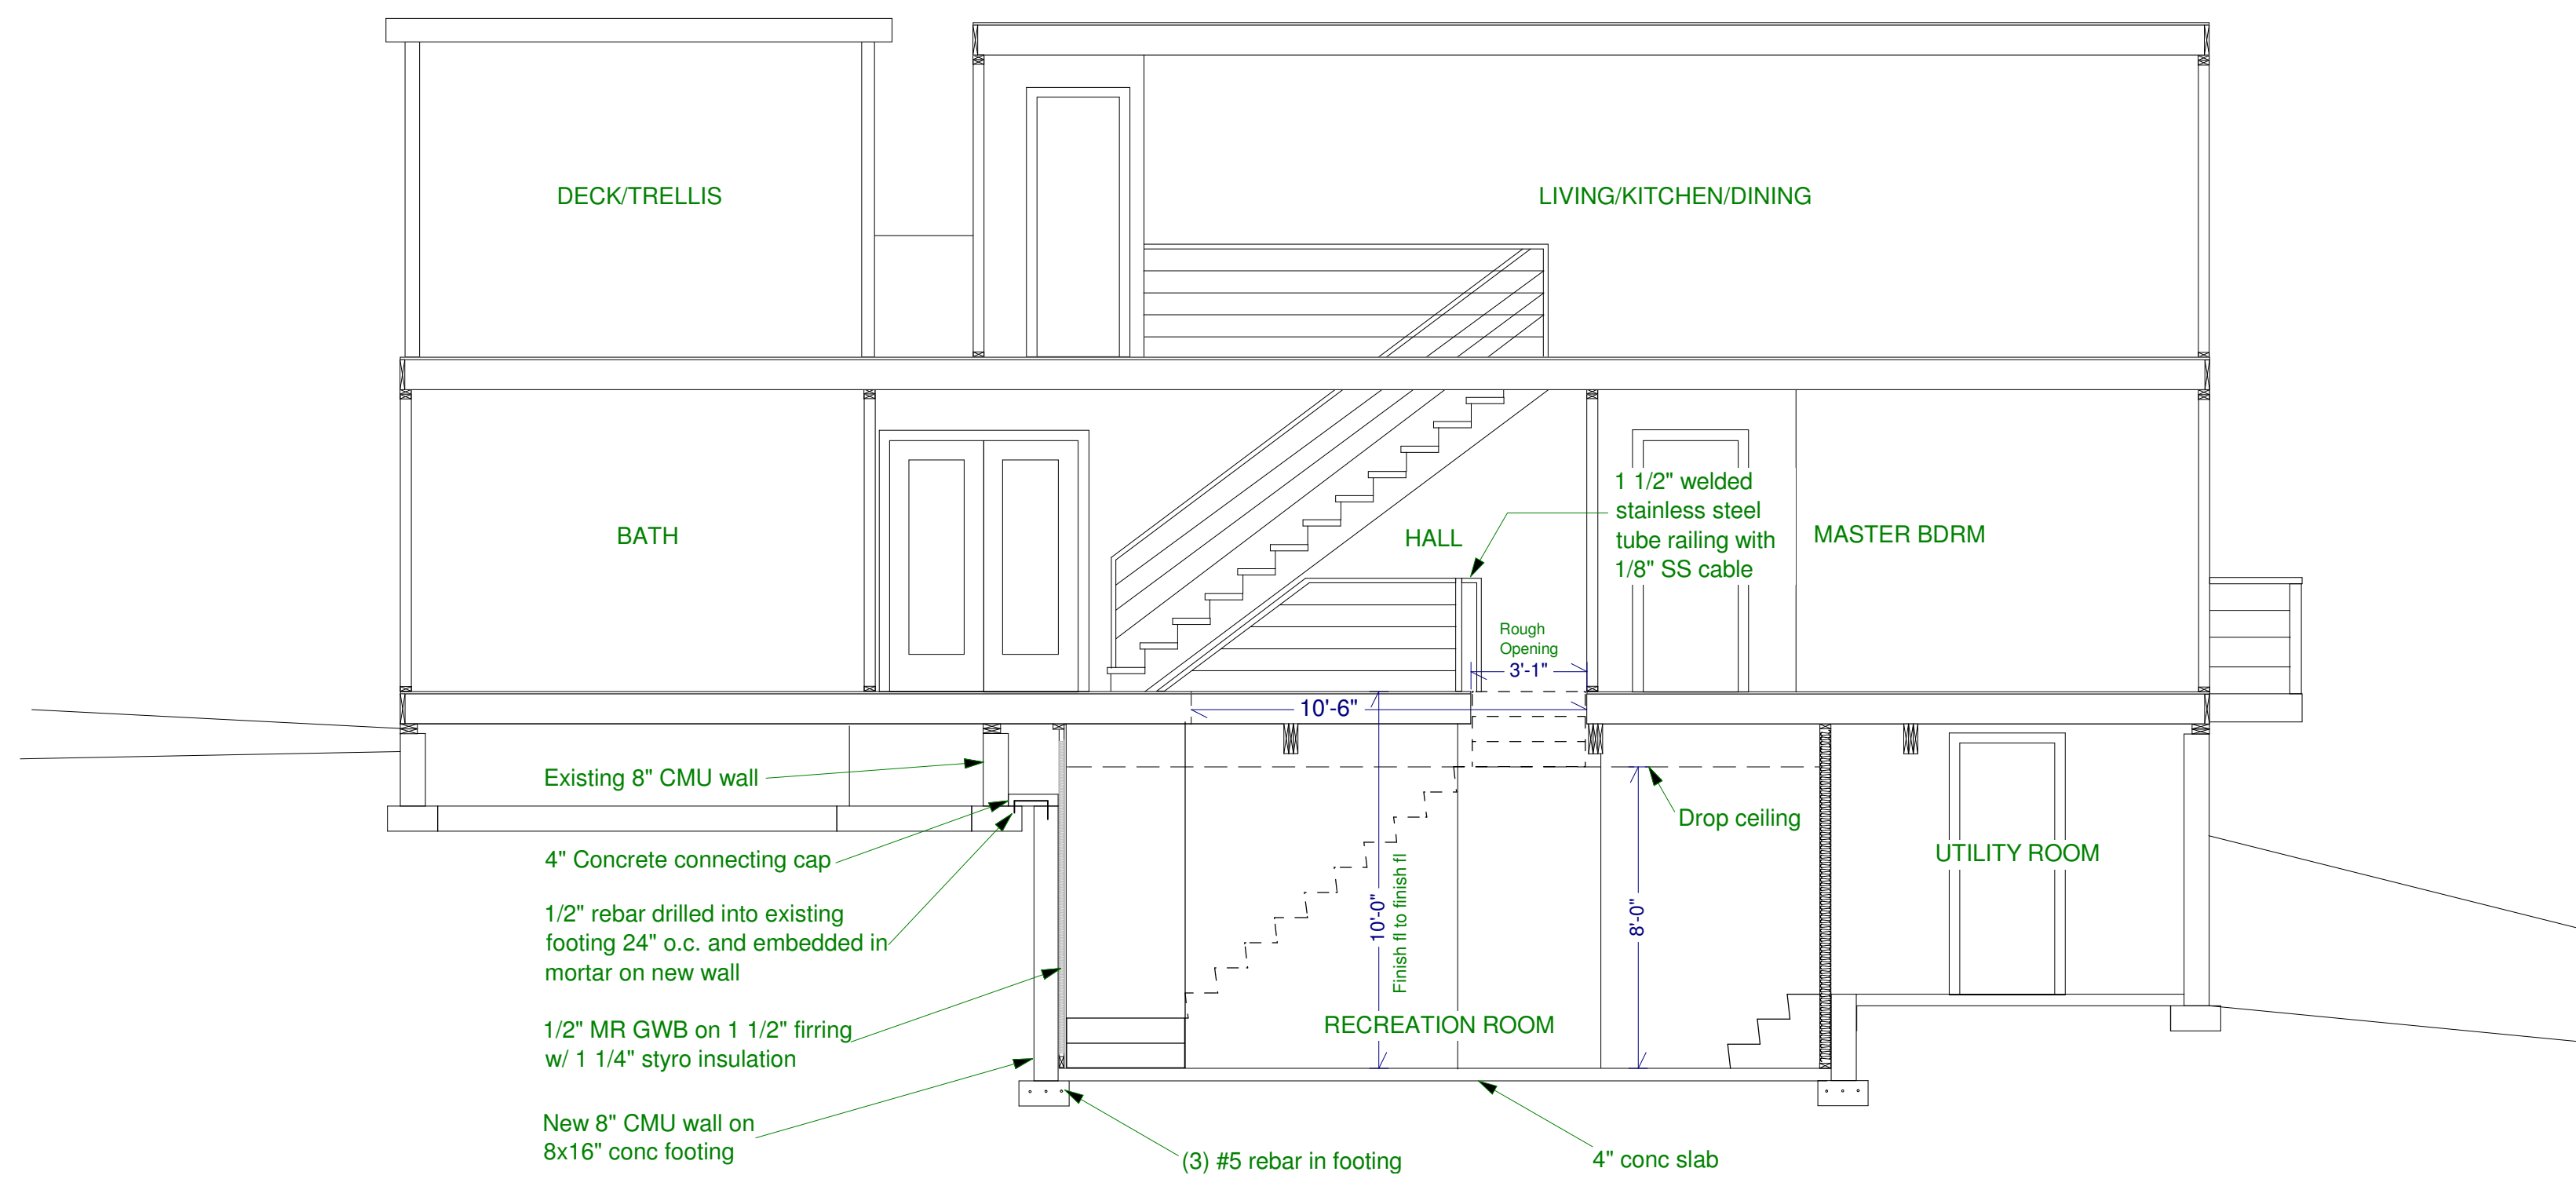

Section A

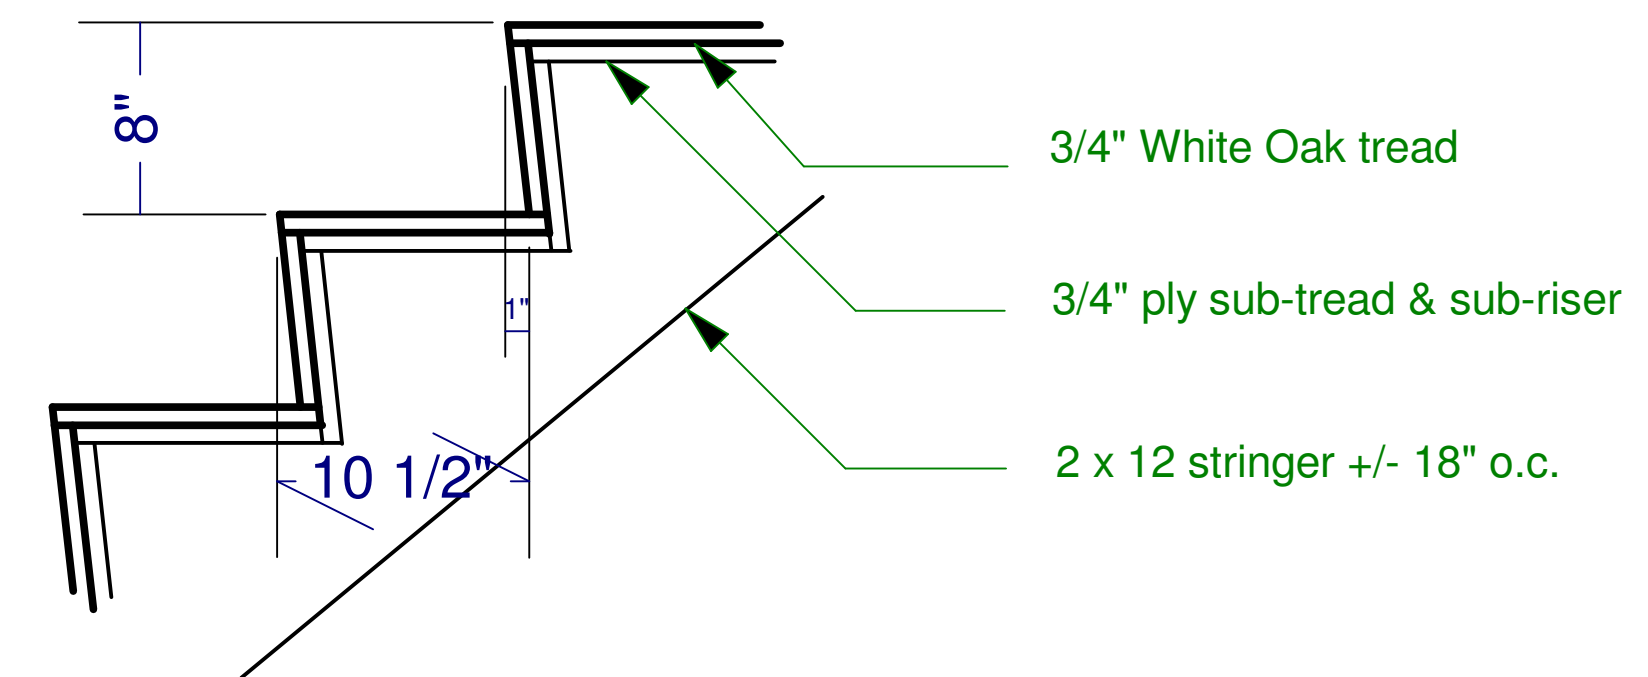

Hidden Stringer Stairs construction details

Against wall(s):
Stringers, sub-risers and sub-treads to be constructed before sheetrock. Sheetrock to be installed to butt to sub-risers and sub-treads. Oak risers and treads to be installed after spackle.

Open side(s):
Stringers, sub-risers and sub-treads to be constructed before sheetrock. Sheetrock and L-bead to be installed on open side flush to sub-risers and sub-treads. Oak risers and treads to be installed after spackle, extending 3/4" beyond spackled surface.

Stair Detail (scale 1 1/2" = 1')

Gershman Residence 102 Surfside Ave. Montauk, NY	Revisions	Copyright (c) 2006. All rights reserved. David A. Webb, Inc. Design, Drafting, Engineering, General Contracting 516 - 982 - 8502	Date	12/20/06	Drawn by	DW	Scale	1/4" = 1'	Sheet	3
	Sections & Details									